



Quick Start Guide

SomoGear PEQ-2A Visible Laser + Flashlight Version

Mode	Marking	Visible Laser	LED Flashlight
0	OFF	off	off
1	AIM LO	visible laser on	off
2	ILLUM LO	visible laser on	flashlight on
3	AIM HI	off	strobe=single click constant=double click
4	ILLUM HI	x	x
5	DUAL HI/HI	x	x

* Use New 2*1.5V AA
* For Airsoft Use Only!!!



LASER POWER SPECIFICATIONS

Beam	High Power	Low Power	Weavelength	FDA Grade
Red Laser	no function	≤4.0mW	650nm	Class 3R
Green Laser	no function	≤4.0mW	520nm	Class 3R
IR Laser	no function			
LED Flashlight	290 lumen			

WINDAGE & ELEVATION ADJUSTMENT ADJUSTER


Adjuster	Position	Direction	Pointer Movement
Elevation Knobs	Top	U	Up
		D	Down
Windage Knobs	Side	L	Left
		R	Right

Use wrench to rotate the adjuster as needed according to the instruction table above

Double Click = Constant On
Single Click = Momentary

LED INDICATOR:

Green Light: Working correctly
Red Light: Low battery

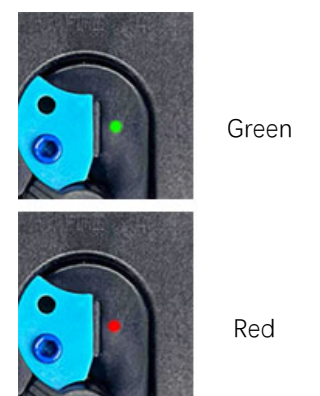

Manuale Utente

SomoGear PEQ-15 Visibile Laser + Torcia Versione

Modalità	Marchatura	Laser Visibile	Torcia LED
0	OFF	off	off
1	AIM LO	attivare	off
2	ILLUM LO	attivare	attivare
3	AIM HI	off	strobe=clic singolo costante=doppio clic
4	ILLUM HI	x	x
5	DUAL HI/HI	x	x

* Usa batterie 2*1.5V AA
* Solo per uso softair!!!



SPECIFICHE DI POTENZA LASER

Fascio	Alta Potenza	Bassa Potenza	Lunghezza d'Onda	Laser Grado
Laser Rosso	nessuna funzione	≤4.0mW	650nm	Classe 3R
Laser Verde	nessuna funzione	≤4.0mW	520nm	Classe 3R
Laser IR	nessuna funzione			
Torcia LED	290 lumen			

REGOLAZIONE DI ALZO E DERIVA

Regolatore	Posizione	direzione	Movimento del puntatore
Manopole di elevazione	Sopra	U	Su
		D	Giù
Manopole di derivazione	Lato	L	Sinistra
		R	Destra

Utilizzare l'apposita chiave per effettuare le regolazioni come da istruzioni di cui sopra

Doppio clic = Costante attivo
Clic singolo = Momentaneo

INDICATORE LED:

Luce verde: Funziona correttamente
Luce rossa: Batteria scarica

