



### Quick Start Guide

SomoGear PEQ-2A IR Laser + IR Illuminator Version

Mode	Marking	IR Laser	IR illuminator
0	OFF	off	off
1	AIM LO	low power	off
2	ILLUM LO	off	low power
3	AIM HI	high power	off
4	ILLUM HI	off	high power
5	DUAL HI/HI	high power	high power

\* Use New 2\*1.5V AA  
\* For Airsoft Use Only!!!



### LASER POWER SPECIFICATIONS

Beam	High Power	Low Power	Weavelength	FDA Grade
IR Laser	≤0.9mW	≤0.1mW	850nm	Class 2
IR Illuminator	≤4.9mW	≤0.7mW	850nm	Class 3R

### WINDAGE & ELEVATION ADJUSTMENT ADJUSTER


Adjuster	Position	Direction	Pointer Movement
Elevation Knobs	Top	U	Up
		D	Down
Windage Knobs	Side	L	Left
		R	Right

Use wrench to rotate the adjuster as needed according to the instruction table above

Double Click = Constant On  
Single Click = Momentary

### LED INDICATOR:

Green Light: Working correctly  
Red Light: Low battery

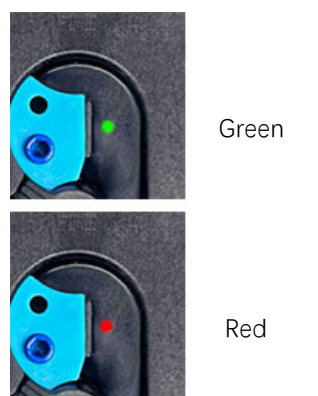

### Manuale Utente

SomoGear PEQ-2A Laser IR + Illuminatore IR

Modalità	Marcatura	Laser IR	Illuminatore IR
0	OFF	off	off
1	AIM LO	bassa potenza	off
2	ILLUM LO	off	bassa potenza
3	AIM HI	alta potenza	off
4	ILLUM HI	off	alta potenza
5	DUAL HI/HI	alta potenza	alta potenza

\* Usa batterie 2\*1.5V AA  
\* Solo per uso softair!!!



### SPECIFICHE DI POTENZA LASER

Fascio	Alta Potenza	Bassa Potenza	Lunghezza d'Onda	Laser Grado
Laser IR	≤0.9mW	≤0.1mW	850nm	Classe 2
Illuminatore IR	≤4.9mW	≤0.7mW	850nm	Classe 3R

### REGOLAZIONE DI ALZO E DERIVA

Regolatore	Posizione	direzione	Movimento del puntatore
Manopole di elevazione	Sopra	U	Su
		D	Giù
Manopole di derivazione	Lato	L	Sinistra
		R	Destra

Utilizzare l'apposita chiave per effettuare le regolazioni come da istruzioni di cui sopra

Doppio clic = Costante attivo  
Clic singolo = Momentaneo

### INDICATORE LED:

Luce verde: Funziona correttamente  
Luce rossa: Batteria scarica

