

### Quick Start Guide

SomoGear PEQ-15 Vis/IR Laser + Flashlight Version

Mode	Marking	Laser	Flashlight
VIS	AH	x	x
	AL	low power	off
0	0	off	off
P	P	x	constant
IR	AL	low power	off
	DL	low power	constant
	AH	x	x
	IH	x	x
	DH	x	x

\* Use New 3V CR123A Battery  
 \* For Airsoft Use Only!!!



### LASER POWER SPECIFICATIONS

Beam	High Power	Low Power	Weavelength	FDA Grade
Red Laser	no function	≤4.0mW	650nm	Class 3R
Green Laser	no function	≤4.0mW	520nm	Class 3R
IR Laser	no function	≤0.7mW	850nm	/
LED Flashlight	290 lumen			

### WINDAGE & ELEVATION ADJUSTMENT ADJUSTER



Adjuster	Position	Mark	Pointer Movement
Elevation Knobs	Top	U	Up
		D	Down
Windage Knobs	Side	L	Left
		R	Right

Use wrench to rotate the adjuster as needed according to the instruction table above

Double Click = Constant On  
 Single Click = Momentary

### LED INDICATOR:

Green Light: Working correctly  
 Red Light: Low battery

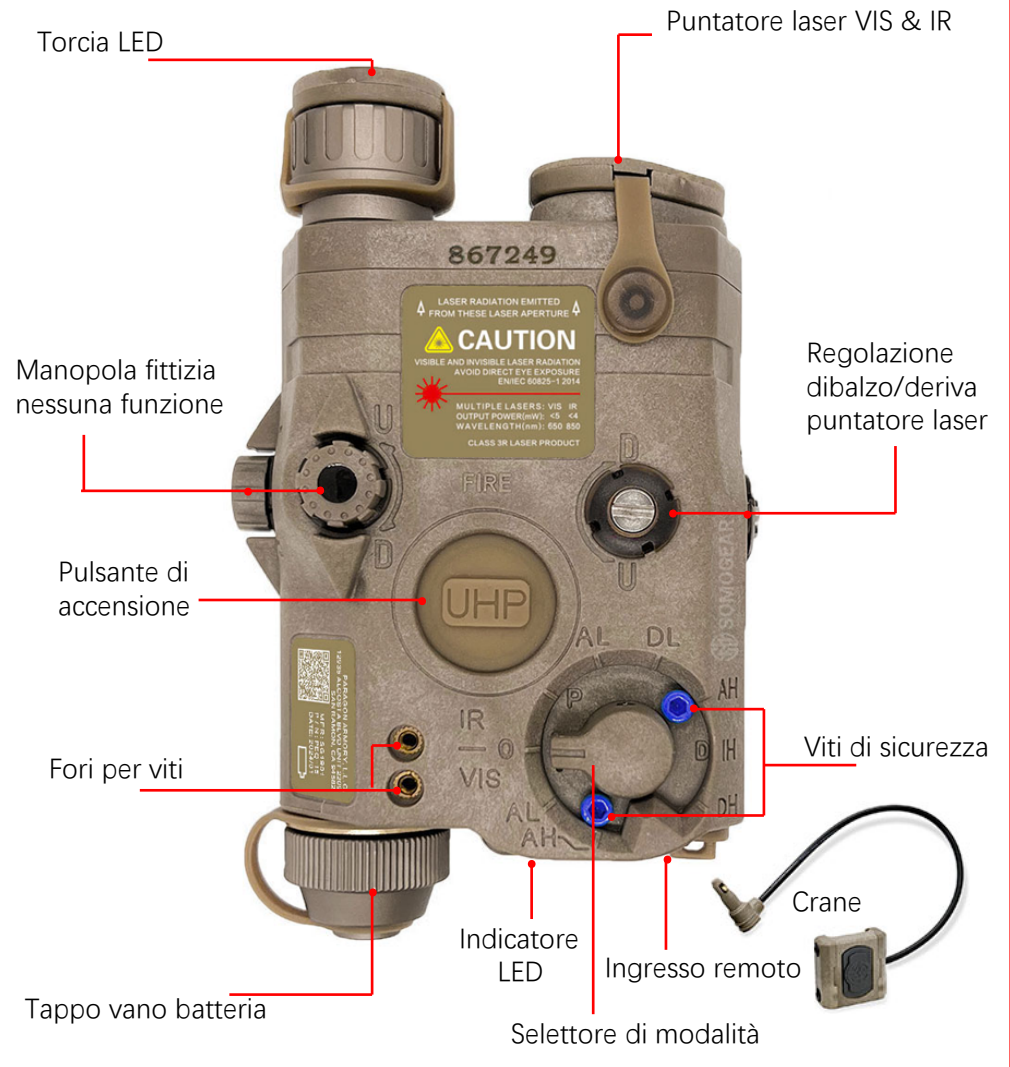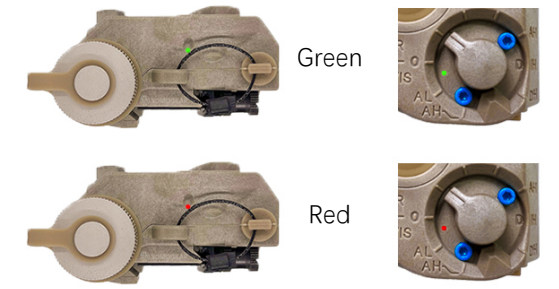

### Manuale Utente

SomoGear PEQ-15 Vis/IR Laser + Torcia Versione

Modalità	Marcatura	Laser	Torcia
VIS	AH	x	x
	AL	bassa potenza	off
0	0	off	off
P	P	x	costante
IR	AL	bassa potenza	off
	DL	bassa potenza	costante
	AH	x	x
	IH	x	x
	DH	x	x

\* Usa batterie 3V CR123A  
 \* Solo per uso softair!!!



### SPECIFICHE DI POTENZA LASER

Fascio	Alta Potenza	Bassa Potenza	Lunghezza d'Onda	Laser Grado
Laser Rosso	nessuna funzione	≤4.0mW	650nm	Classe 3R
Laser Verde	nessuna funzione	≤4.0mW	520nm	Classe 3R
Laser IR	nessuna funzione	≤0.7mW	850nm	/
Torcia LED	290 lumen			

### REGOLAZIONE DI ALZO E DERIVA

Regolatore	Posizione	Segno	Movimento del puntatore
Manopole di elevazione	Sopra	U	Su
		D	Giù
Manopole di derivazione	Lato	L	Sinistra
		R	Destra

Utilizzare l'apposita chiave per effettuare le regolazioni come da istruzioni di cui sopra

Doppio clic = Costante attivo  
 Clic singolo = Momentaneo

### INDICATORE LED:

Luce verde: Funziona correttamente  
 Luce rossa: Batteria scarica

