

Quick Start Guide

SomoGear PEQ-16B Vis/IR Laser + Flashlight Version

Mode	Marking	Laser	Flashlight
VIS	A	low power	off
	L	off	constant
	D	low power	constant
0	0	off	off
IR	AL	low power	off
	DL	low power	LED diode
	AH	x	x
	DH	x	x

* Use New 2 x 3V CR123A Battery
 * For Airsoft Use Only!!!



LASER POWER SPECIFICATIONS

Beam	High Power	Low Power	Weavelength	FDA Grade
Red Laser	no function	≤4.9mW	650nm	Class 3R
Green Laser	no function	≤4.9mW	520nm	Class 3R
IR Laser	no function	≤0.7mW	850nm	/
LED Flashlight	600 lumen			

WINDAGE & ELEVATION ADJUSTMENT ADJUSTER



Adjuster	Position	Mark	Pointer Movement
Elevation Knobs	Top	U	Up
		D	Down
Windage Knobs	Side	L	Left
		R	Right

Use wrench to rotate the adjuster as needed according to the instruction table above

Double Click = Constant On
 Single Click = Momentary

LED INDICATOR:

Green Light: Working correctly
 Red Light: Low battery

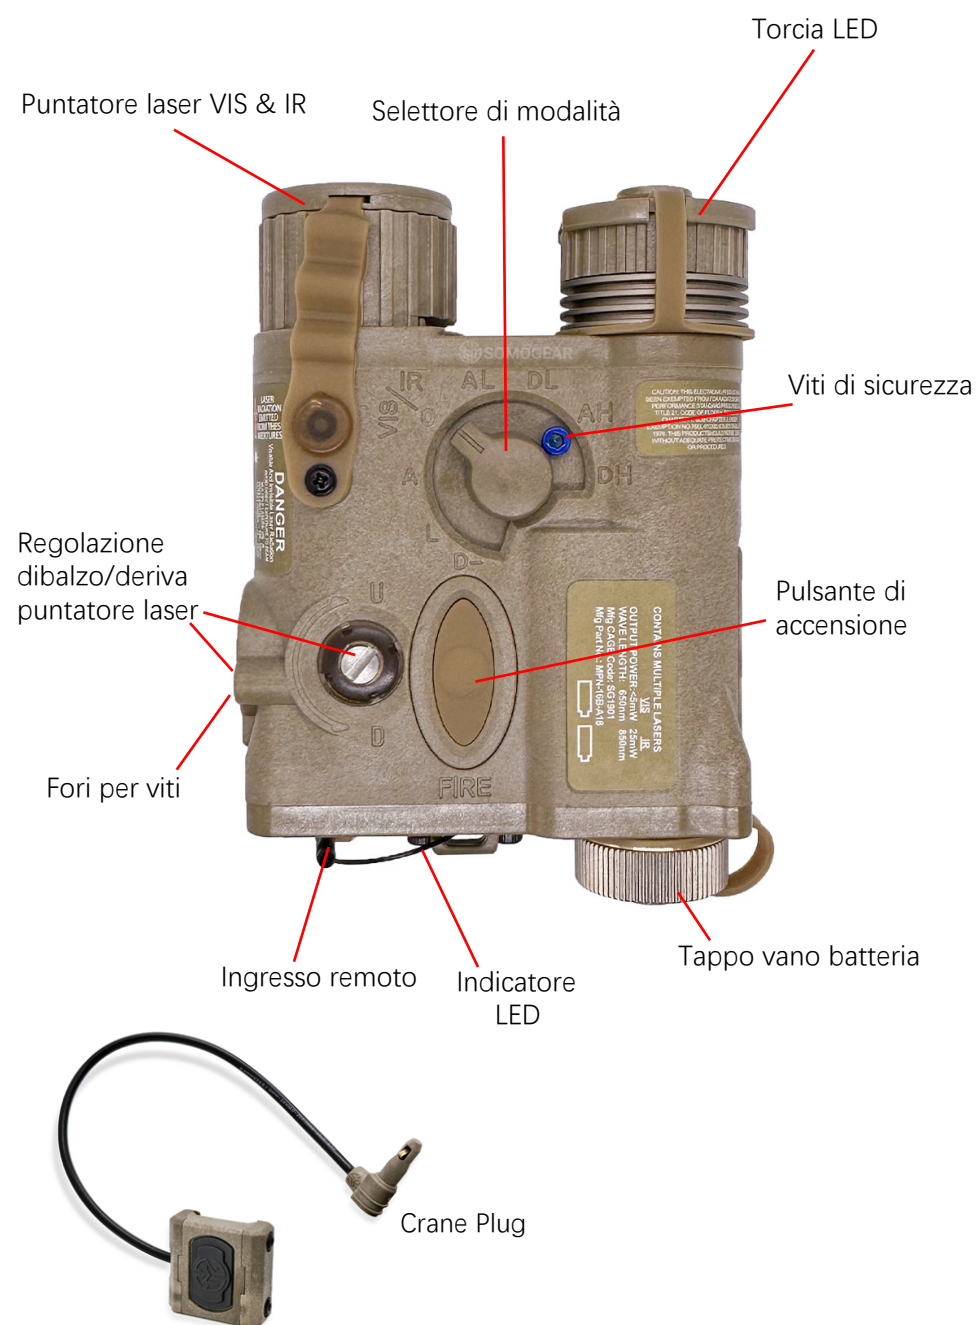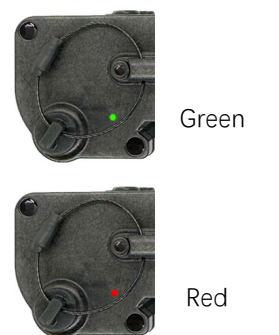

Manuale Utente

SomoGear PEQ-16B Vis/IR Laser + Torcia Versione

Modalità	Marcatura	Laser	Torcia
VIS	A	bassa potenza	off
	L	off	bassa potenza
	D	bassa potenza	costante
0	0	off	off
IR	AL	bassa potenza	off
	DL	bassa potenza	Diodo LED
	AH	x	x
	DH	x	x

* Usa batterie 2 x 3V CR123A
 * Solo per uso softair!!!



SPECIFICHE DI POTENZA LASER

Fascio	Alta Potenza	Bassa Potenza	Lunghezza d'Onda	Laser Grado
Laser Rosso	nessuna funzione	≤4.9mW	650nm	Classe 3R
Laser Verde	nessuna funzione	≤4.9mW	520nm	Classe 3R
Laser IR	nessuna funzione	≤0.7mW	850nm	/
Torcia LED	600 lumen			

REGOLAZIONE DI ALZO E DERIVA

Regolatore	Posizione	Segno	Movimento del puntatore
Manopole di elevazione	Sopra	U	Su
		D	Giù
Manopole di derivazione	Lato	L	Sinistra
		R	Destra

Utilizzare l'apposita chiave per effettuare le regolazioni come da istruzioni di cui sopra

Doppio clic = Costante attivo
 Clic singolo = Momentaneo

INDICATORE LED:

Luce verde: Funziona correttamente
 Luce rossa: Batteria scarica

